


Product Description

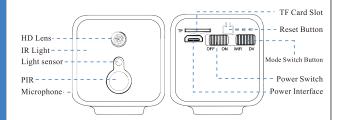

How to reset camera: Turn the power switch to "ON", hold on the reset button for 5 seconds until you see the blue light and the green light turn on together, and then the blue light flashes slowly.

Device Description

- This device has two modes: IP Camera (WiFi) mode and Recorder (DV) mode.
- Built-in battery.
- Support DC5V/2A power supply.

Indicator Status

Yellow light: always bright during charging

 
Blue light: slow flash---waiting for conne-ction; fast flash during connection; always bright --- connection success

Green light: slow flash---during recording; fast flash---does not insert a TF card

Restore factory: the green and blue lights are on, then the blue light flashes slowly

Step 1: Pre-Setup

- ✓ Turn the power switch to "ON" mode.
- ✓ Turn the mode switch button to "WiFi" mode.
- ☑ It is recommended to place the camera within 2 meters of the router.
- ✓ Connecting the phone to the WiFi and make sure know the exact WiFi password (only supports 2.4GHz).



Step 2: APP Download and Registration



1 Search for "Fowl" in App Store or Google Play, or scan the QR code to download the app.



2 Click "Register", enter the user name and password to complete the registration.

Step 3: Add Devices to the APP

Method One:



1 Click Add device and choose 2 Please enter the correct WiFi WiFi camera.

password, (The device does not support 5G Hz network).





- 3 About 20 seconds later, you will be prompted for a successful binding.
- 4 Click "Add it".

Method Two:



1 Please go to your mobile phone WiFi Settings, select

MC-XXX and connect it.

2 Open the app and Click play to watch and operate the the WiFi hotspot that start with camera.



You are Done!


To enhance the security, the initial password need to be changed.

Please write down your device information:

Fowl account name: _


Fowl account password:

Configure WiFi

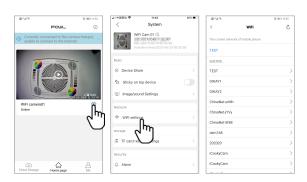

- parameters
- 1 Enter camera 2 Select WiFi settings. 3 Select your home
 - WiFi and enter the WiFi password correctly.

DV Mode Usage

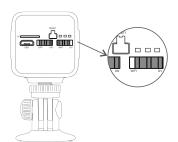

Turn the power switch to "ON", the mode switch button to "DV", and insert a TF card for 24 hours of continuous recording.

How to view recording videos?

- 1 Turn the mode switch button to WiFi mode, enter the APP, and go to "TF card" to view.
- 2 Place the TF card in the card reader and plug the card reader to the computer, then you can view the video on the computer.

Device Share





Click "Settings" on the right corner, then select "Device Share" --- "QR Code Sharing". Other users can open the app and click the "+" in the upper right corner of the home page to scan the QR code to add the device.