


**USER MANUAL** 

**Product Description** 

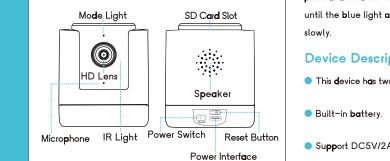

set: When the camera is turned on,

press and hold the reset button for about 3 seconds until the blue light and red light flash alternately when fully charged.

 This device has two modes: AP mode and WiFi mode -- Wi-Fi connection success.

alternately slowly.

rapidly at the same time.

it: always bright during charging, goes off

'aht: slow flash---waiting for Wi-Fi connection: fast flash --- during Wi-Fi connection; always bright

eset: the blue light and red light flash

✓ Click the "ON/OFF" button 3 seconds to turn on.

Long press the reset button 3 seconds to factory reset.

# Step 1: Pre-Setup

of the router for the first time connecting to the Internet.

alarm: the blue light and red light flash

It's recommended to place the camera within 2 meters

Connect the mobile phone to the router Wi-Fi, and know the Wi-Fi connection password. (Only 2.4GH Search for "O-KAM" in App Store or Google Play, or

Wi-Fi is supported (How to power off: Long press the power button


for 3 seconds to power off)

scan the QR cord to download the app.

Hello, welcome to use Please login



directly select "Wireless camera".

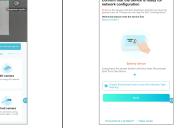

factory settings



← Connect WI-FI

to connect and enter the

networks are not supporte

correct password.(5



the app with the camera lens unt to the internet, clic "Get started".

right corner of the page, and select "Hotspot configuration".

1 Click the icon in the upper 2 Click "To connect"

Hotspot configuration

of the mobile phone, select 

successfully **add** the device, and then click







users open the APP, click the "Add" button on the home

page, and then scan the QR code to add the device.