

User's Manual



интернет-магазин GADGETPLANET.COM.UA

Quick operation guide

Preface

Thank you for using our recording pen

In order to familiarize you with the operation of the machine as soon as possible, we have provided a user manual with detailed contents, from which you can obtain knowledge about product introduction, use methods, system settings, safety precautions, etc. Before you use this product, please carefully read all the materials provided with it, which will help you better use this product.

We are very careful and rigorous in the preparation of this manual, and believe that the information provided in this manual is correct and reliable. If there is any omission, please forgive and welcome your correction.

If you find any problems in the use of the product, please contact us in time, thank you for your cooperation!

Quick guide

1. switch machine

(1) Power on: push the power switch of the recording pen from the "off" position to the "on" position, and it will start automatically

(2) Turn off: push the power switch of the recording pen from the "on" position to the "off" position

2. Start recording - stop (save)

(1) Start recording: start recording when the recording switch is pushed upward from the "save" position to the "recording" position (the red light is on when the recording enters, and the recording time starts to move on the screen at this time, indicating that the machine is recording)

(2) Save recording: during recording, when the recording switch is pushed down from the "recording" position to the "save" position, it stops and saves the current recording file

(3) Pause recording: in the process of recording, short press the "play" key. At this time, the red light starts flashing to indicate that the recording is paused. If you want to continue recording, short press the "play" key again. At this time, the red light is always on to indicate that the machine continues recording. The saving method is the same as (2)

3. playback

(1) Play recording: in recording mode, press "" to start playing the current recording fileplay

(2) Play music: in music mode, press "" to start playing music filesplay

I.Matters needing attention

*Do not format the machine on the computer or mobile phone, so as to avoid poor recording effect and file loss

*If you plan to not use this product for a long time, please turn the power on key to

the "off" position, and keep it for about 3 months to replenish the power of the machine

*Please do not use this product in extremely hot, cold, dusty or humid environment

*Do not let this product fall when using

*Please replenish the power when the power indicator is empty -- - ", or the power is automatically shut down due to low power

Special notice: specially remind the user to operate carefully and back up the data separately. In case of data loss or careless deletion of the file on the machine, the company will not be responsible for it

*The company reserves the right to improve the product, product specifications and design changes, without notice!The pictures and text descriptions listed in this manual are for reference only, subject to the actual operation effect

*This machine has no waterproof function and should not suffer from splashes and drops

2、 Functional features

- new generation of digital high definition recording pen

 
High clear screen display of IPS is easy to operate

Zinc alloy die-casting integrated shell with high strength, falling resistance and impact resistance

- with Clock IC function
- recording files can be deleted on the machine
- high quality recording, long-distance recording (human ear can hear, machine can record)
- A-B repeat function
- monitoring function

- voice control function
- built in high fidelity speaker
- built in lithium battery
- MP3 play function
- power on password lock
- support for multiple languages

3、 Appearance description

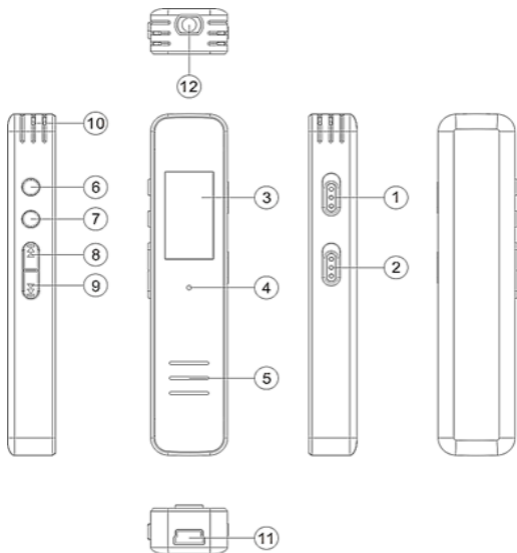

1. Recording / saving key 2. Power on / off
 3. Display 4. Recording light 5. Speaker 6.
 Play / pause key 7. Menu key 8. Previous
 music / rewind 9. Next music / rewind 10.
 Microphone 11. USB interface 12.
 Headphone hole

4、 Instructions for use

1. Basic operation

1.1 power supply

This machine is powered by built-in lithium battery. When the battery indicator indicates, please charge in time. When charging, please turn the power switch to the on position."

Precautions for charging the machine:

(1) Disable mobile phone fast charging charger

(2) Disable chargers and charging tools and equipment with DC voltage higher than 5V

(3) The charging time is about 2 to 4 hours. The machine can be unplugged when it is full. Do not charge for a long time

The machine is in charging state. Power indicator changes from empty to full cycle,

indicating that the machine is in charging state

1.2 switch machine

(1) When the power on key is in the "off" position, the machine is disconnected from the power supply and cannot be started

(2) When the power on key is turned from "off" to "on", the machine will start automatically and enter the standby mode.

In standby mode: the on / off of the machine can also be controlled by the "" key, as follows:play

Shut down: when the machine is started and stopped, press and hold the "" key for 3 seconds until "byebye" is displayed to shut down and enter sleep.play

Note: the system will shut down automatically if there is no operation within 5 minutes when the machine is in the state of pause or stop

1.3 playing recording or music files

(1) Play recording file: in the main menu, press "previous" or "next" to select the recording mode, and then press "play" to enter the recording selection interface, press "previous" or "next" to select the recording file you want to play, and press "" to start playing the current recording file.play

(2) Play music file: in the main menu, press "previous" or "next" to select the music mode, then press "" to enter the music playing interface, press "previous" or "next" to select the music file you want to play, and then press "" again to start playing the current music file.Playback and playback

(3) Delete the file; when the music and recording playback are stopped, long press the "menu" key to enter the settings.Press the key briefly to select single deletion or all deletion, then press

the play key briefly to confirm whether to delete the file

1.4 suspension

In the play file state, short press "" to play pause state, and then short press "" to continue playing. Playback and playback

1.5 previous / next, fast forward / rewind

In the playing state, short press "next" key to switch to the next file, short press "previous" key to switch to the previous file, long press "next" key to fast forward and long press "previous" to fast backward.

1.6 volume adjustment

In the playing state, long press the "play" key to enter the volume adjustment, short press the "next" key to reduce the volume, short press the "previous" key to increase the volume. Volume level 0-31 changes. Press the "" key again to exit the volume regulator.play

1.7 cycle mode

In the playing state, long press the "menu" key to enter the playing setting list, short press the "" key to enter the playing mode, you can press the "next song" key to select all cycles respectively, random play, browse play, single cycle. Short press the "" key to confirm the setting.playplay

1.8 equalizer

In the playing state, long press "menu" to enter the playing setting list, press "next" key to select to enter the sound setting, press "next" key to select rock, funk, hip hop, classical, electronic music, jazz, short press "" key to confirm the setting,play

1.9 repetition mode

In the playback state, long press "menu" to enter the playback setting list, press "next song" key to select the rereading setting, short press "" key to enter the

rereading setting and return to the playback interfaceplay

Set rereading start, LCD display a flashes at this time, short press "next song" key, LCD display B flashes at this time, start rereading start point, then short press "next song" key, LCD display B stops flashing at this time, end rereading end point, LCD display A-B at this time, repeat the content between start point and end point, realize AB rereading function, and then short press "play" key to cancel A-B rereading function.

2. recording

In the main menu interface, press "previous" or "next" to select recording, short press "" to enter, then press "previous" or "next" to select the items to be set, and short press "" to enter the setting.Short press the "play" key to confirm and return to the previous level, long press the "menu" key to exit and

return to the main menu interface Playback and playback

2.1 recording format

Short press the "play" key to enter the recording format, short press the "previous" or "next" key to select the required recording format, and then short press the "play" key to confirm and return to the previous level.

2.2 Recording bit rate

Short press the "play" key to enter the recording bitrate, short press the "previous" or "next" key to select the required recording bitrate, and then short press the "play" key to confirm and return to the previous level.

2.3 Voice control settings

Short press the "play" key to enter the voice control setting, short press the "previous" or "next" key to select the normal mode or voice control mode, and

then short press the "play" key to confirm and return to the previous level.

2.4 Recording light switch

Short press the "play" key to enter the recording light switch, short press the "previous" or "next" key to select whether the recording light is on or off, and then short press the "play" key to confirm and return to the previous level.

2.5 Monitor settings

Short press "play" key to enter monitoring setting, short press "previous" or "next" key to select monitoring on or off, then short press "play" key to confirm and return to the previous level.

2.6 Gain setting

Short press the "play" key to enter the gain setting, short press the "previous" or "next" key to select the required gain level (Level 1 to 7), then short press the "play" key to confirm and return to the previous level.

2.7 Recording segmentation

Short press the "play" key to enter the recording segmentation, short press the "previous" or "next" to select the size of the required segmentation recording time (0 to 300 minutes), if you do not need to split the recording, please set it to 0, short press the "play" key to confirm and return to the previous level.

2.8 Regular recording

Short press the "play" key to enter the timing recording, short press the "previous" or "next" key to select the timing recording on / off, timing recording cycle, start time and end time in turn. If you need time recording, please turn the power switch to the on position.

3. music

In the main menu interface, press "previous" or "next" to select music, short press "" to enter, then press "previous" or

"next" to select items, short press "" to enter. Playback and playback

4. setting

In the main menu interface, press "previous" or "next" to select settings, short press "" to enter, then press "previous" or "next" to select the items to be set, short press "" to enter the settings. Short press the "play" key to confirm and return to the previous level, long press the "menu" key to exit and return to the main menu interface Playback and playback

4.1 Display settings

Short press the "play" key to enter the display setting, short press the "previous" or "next" key to select brightness, backlight timer, screen protection short press the "play" key to enter the setting, short press the "play" key to confirm, short press the "menu" key to return to the previous level.

4.2 Date and time

Short press the "play" key to enter the date and time, short press the "previous" or "next" key to select the required date and time (short press the previous or next key to adjust the value, short press the menu key to adjust the position), short press the "play" key to confirm, short press the "menu" key to return to the previous level.

4.3 Language settings

Short press the "play" key to enter the language, short press the "previous" or "next" key to select the required language (the machine has simplified Chinese, traditional Chinese, English and other languages to choose), then short press the "play" key to confirm and return to the previous level.

4.4 Password settings

Short press the "play" key to enter the password setting, short press the "previous" or "next" key to select the password switch and password

modification (turn on the password switch and enter the password setting again), short press the "play" key to confirm, short press the "menu" key to return to the previous level.

4.5factory setting

Short press the "play" key to enter the factory setting, short press the "previous" or "next" key to select whether to restore the factory setting, short press the "play" key to confirm, short press the "menu" key to return to the previous level.

5、 Connecting to a computer

Plug one end of the USB cable into the USB port and the other end into the USB port of the computer.

Use normal methods to remove removable disks to prevent data loss.

Technical specifications

Outline size	90X18.8X11.8MM	
Display	TFT display screen	
USB interface	USB 2.0 High Speed	
Storage medium	4GB – 32GB (optional)	
Battery	3.7v/250ma polymer battery	
Music	MP3	8KHz–48KHz 8Kbps–320Kbps
Sound recording	WAV format	512 768 1024 1536Kbps
headphone output	maximum output	2X20MW(16ohm)
	frequency response	20Hz to 20KHz
	Signal-to-noise ratio	>90dB
	Distortion	0.05%
Service temperature	-5To 40 °C	
Supported operating systems	Windows 98 Second Edition/MillenniuMEdition/2000/XP/ Windows 7	

Statement

Users are required to back up their own data during use. Our company is not responsible for the loss and damage of personal data caused by software and hardware misoperation, product maintenance, battery replacement or other accidents. We are not responsible for other indirect losses caused by this. At the same time, we cannot control users' misunderstanding of this manual. Therefore, our company will not be responsible for any accidental damage that may occur during the use of this manual, and not for any third party claim arising from the use of the product.